


1x




Metropol




4x



4x



2x 710 222 18

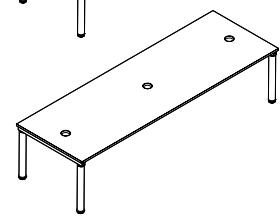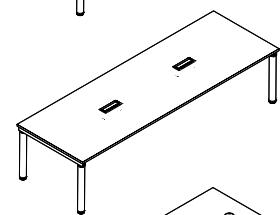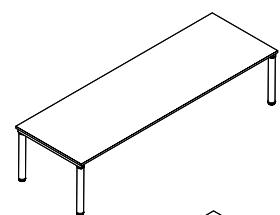



Schraube für Fussbefestigung fest anziehen.

Firmly tighten the screw holding the legs.

Serrare la vite di fissaggio del piede.

Bien serrer la vis de fixation du pied.

Tornillos para la consolidación de las patas de fijación.

Schroef voor voetbevestiging stevig vastdraaien.

